








## LEADING QUALITY TORQUE WRENCHES

	TORQUE CHART ( PSI To TORQUE )										
	3/4" SQ DRIVE 1 - Head		1" SQ DRIVE 3 - Head		1-1/2" SQ DRIVE 5 - Head		1-1/2" SQ DRIVE 10 - Head		2-1/2" SQ DRIVE 25 - Head		
	PSI	Ft Lbs	NM	Ft Lbs	NM	Ft Lbs	NM	Ft Lbs	NM	Ft Lbs	NM
	1500	200	271	480	650	835	1131	1755	2378	3960	5366
	1600	214	290	512	694	890	1206	1864	2526	4216	5713
	1800	242	328	576	780	1000	1355	2082	2821	4728	6407
	2000	270	366	640	867	1110	1504	2300	3117	5240	7100
	2200	298	404	704	954	1222	1656	2526	3423	5752	7794
	2400	326	442	768	1041	1334	1808	2752	3729	6264	8488
	2600	354	480	832	1127	1446	1959	2978	4035	6776	9182
	2800	382	518	896	1214	1558	2111	3204	4341	7288	9875
	3000	410	556	960	1301	1670	2263	3430	4648	7800	10569
	3200	438	593	1024	1388	1782	2415	3656	4954	8318	11271
	3400	466	631	1088	1474	1894	2566	3882	5260	8836	11973
	3600	494	669	1152	1561	2006	2718	4108	5566	9354	12675
	3800	522	707	1216	1648	2118	2870	4334	5873	9872	13377
	4000	550	745	1280	1734	2230	3022	4560	6179	10390	14079
	4200	578	783	1344	1824	2342	3173	4792	6493	10898	14767
	4400	606	821	1412	1913	2454	3325	5024	6808	11406	15455
	4600	634	859	1478	2003	2566	3477	5256	7122	11914	16144
	4800	662	897	1544	2092	2678	3629	5488	7436	12422	16832
	5000	690	935	1610	2182	2790	3780	5720	7751	12930	17520
	5200	718	973	1674	2268	2902	3932	5948	8060	13450	18225
	5400	746	1011	1738	2355	3014	4084	6176	8369	13970	18930
	5600	774	1049	1802	2442	3126	4236	6404	8678	14490	19634
	5800	802	1087	1866	2528	3238	4388	6632	8986	15010	20339
	6000	830	1125	1930	2615	3350	4539	6860	9295	15530	21043
	6200	858	1163	1994	2702	3462	4691	7094	9612	16040	21734
	6400	886	1201	2058	2789	3574	4843	7328	9930	16550	22425
	6600	914	1238	2122	2875	3686	4995	7562	10247	17060	23117
	6800	942	1276	2186	2962	3798	5146	7796	10564	17570	23808
	7000	970	1314	2250	3049	3910	5298	8030	10881	18080	24499
	7200	998	1352	2316	3138	4022	5450	8264	11198	18602	25206
	7400	1026	1390	2382	3228	4134	5602	8498	11515	19124	25913
	7600	1054	1428	2448	3317	4246	5753	8732	11832	19646	26621
	7800	1082	1466	2514	3407	4358	5905	8966	12149	20168	27328
	8000	1110	1504	2580	3496	4470	6057	9200	12466	20690	28035
	8200	1138	1542	2646	3585	4582	6209	9432	12780	21214	28745
	8400	1166	1580	2712	3675	4694	6360	9664	13095	21738	29455
	8600	1194	1618	2778	3764	4806	6512	9896	13409	22262	30165
	8800	1222	1656	2844	3854	4918	6664	10128	13724	22786	30875
	9000	1250	1694	2910	3943	5030	6816	10360	14038	23310	31585
	9200	1278	1732	2974	4030	5142	6967	10592	14352	23826	32285
	9400	1306	1770	3038	4117	5254	7119	10824	14667	24342	32984
	9600	1334	1808	3102	4203	5366	7271	11056	14981	24858	33683
	9800	1362	1846	3166	4290	5478	7423	11288	15295	25374	34382
	10,000	1390	1883	3230	4377	5590	7575	11520	15610	25890	35081

NSW Ph: 0418 421 654  
 QLD: Ph 0431 700 198  
 SA / NT: Ph 0439 188 400  
 WA: 0418 802 973  
 PNG/INDO - 0438 001 936

SAFETY: Read & understand all manufactures safety instructions before using equipment. Do not take risks or use tooling with damaged components. Keep hands clear of tool, hose and pump during operation. Wear Safety Glasses always. Wear other safety attire required by your industry. Test tooling, hoses and pump at maximum pressure prior to using. Read Testing Procedure. Read risk assessment.

Hire & Sales ~ [office@tjtools.com.au](mailto:office@tjtools.com.au) [www.tjtools.com.au](http://www.tjtools.com.au)